SOME GENERAL NOTES:

- Nut 3522026 should be tight + Loctite. Re- check tightness regularly.
-The timing sequence of the 6 sections is very important. It should be 1, 6, 2, 5, 3, 4.
- The timing washer 6004034 is a help for the correct assembly of the sections.
- The number of dimples on this washer should be in line with the section 1 to 6.
- The rear roller is mounted in the centre hole. The depth setting is done via the front roller
- Clean with AIR. Be carefull with (high pressure) water.
- This water could enter and damage the ball bearings

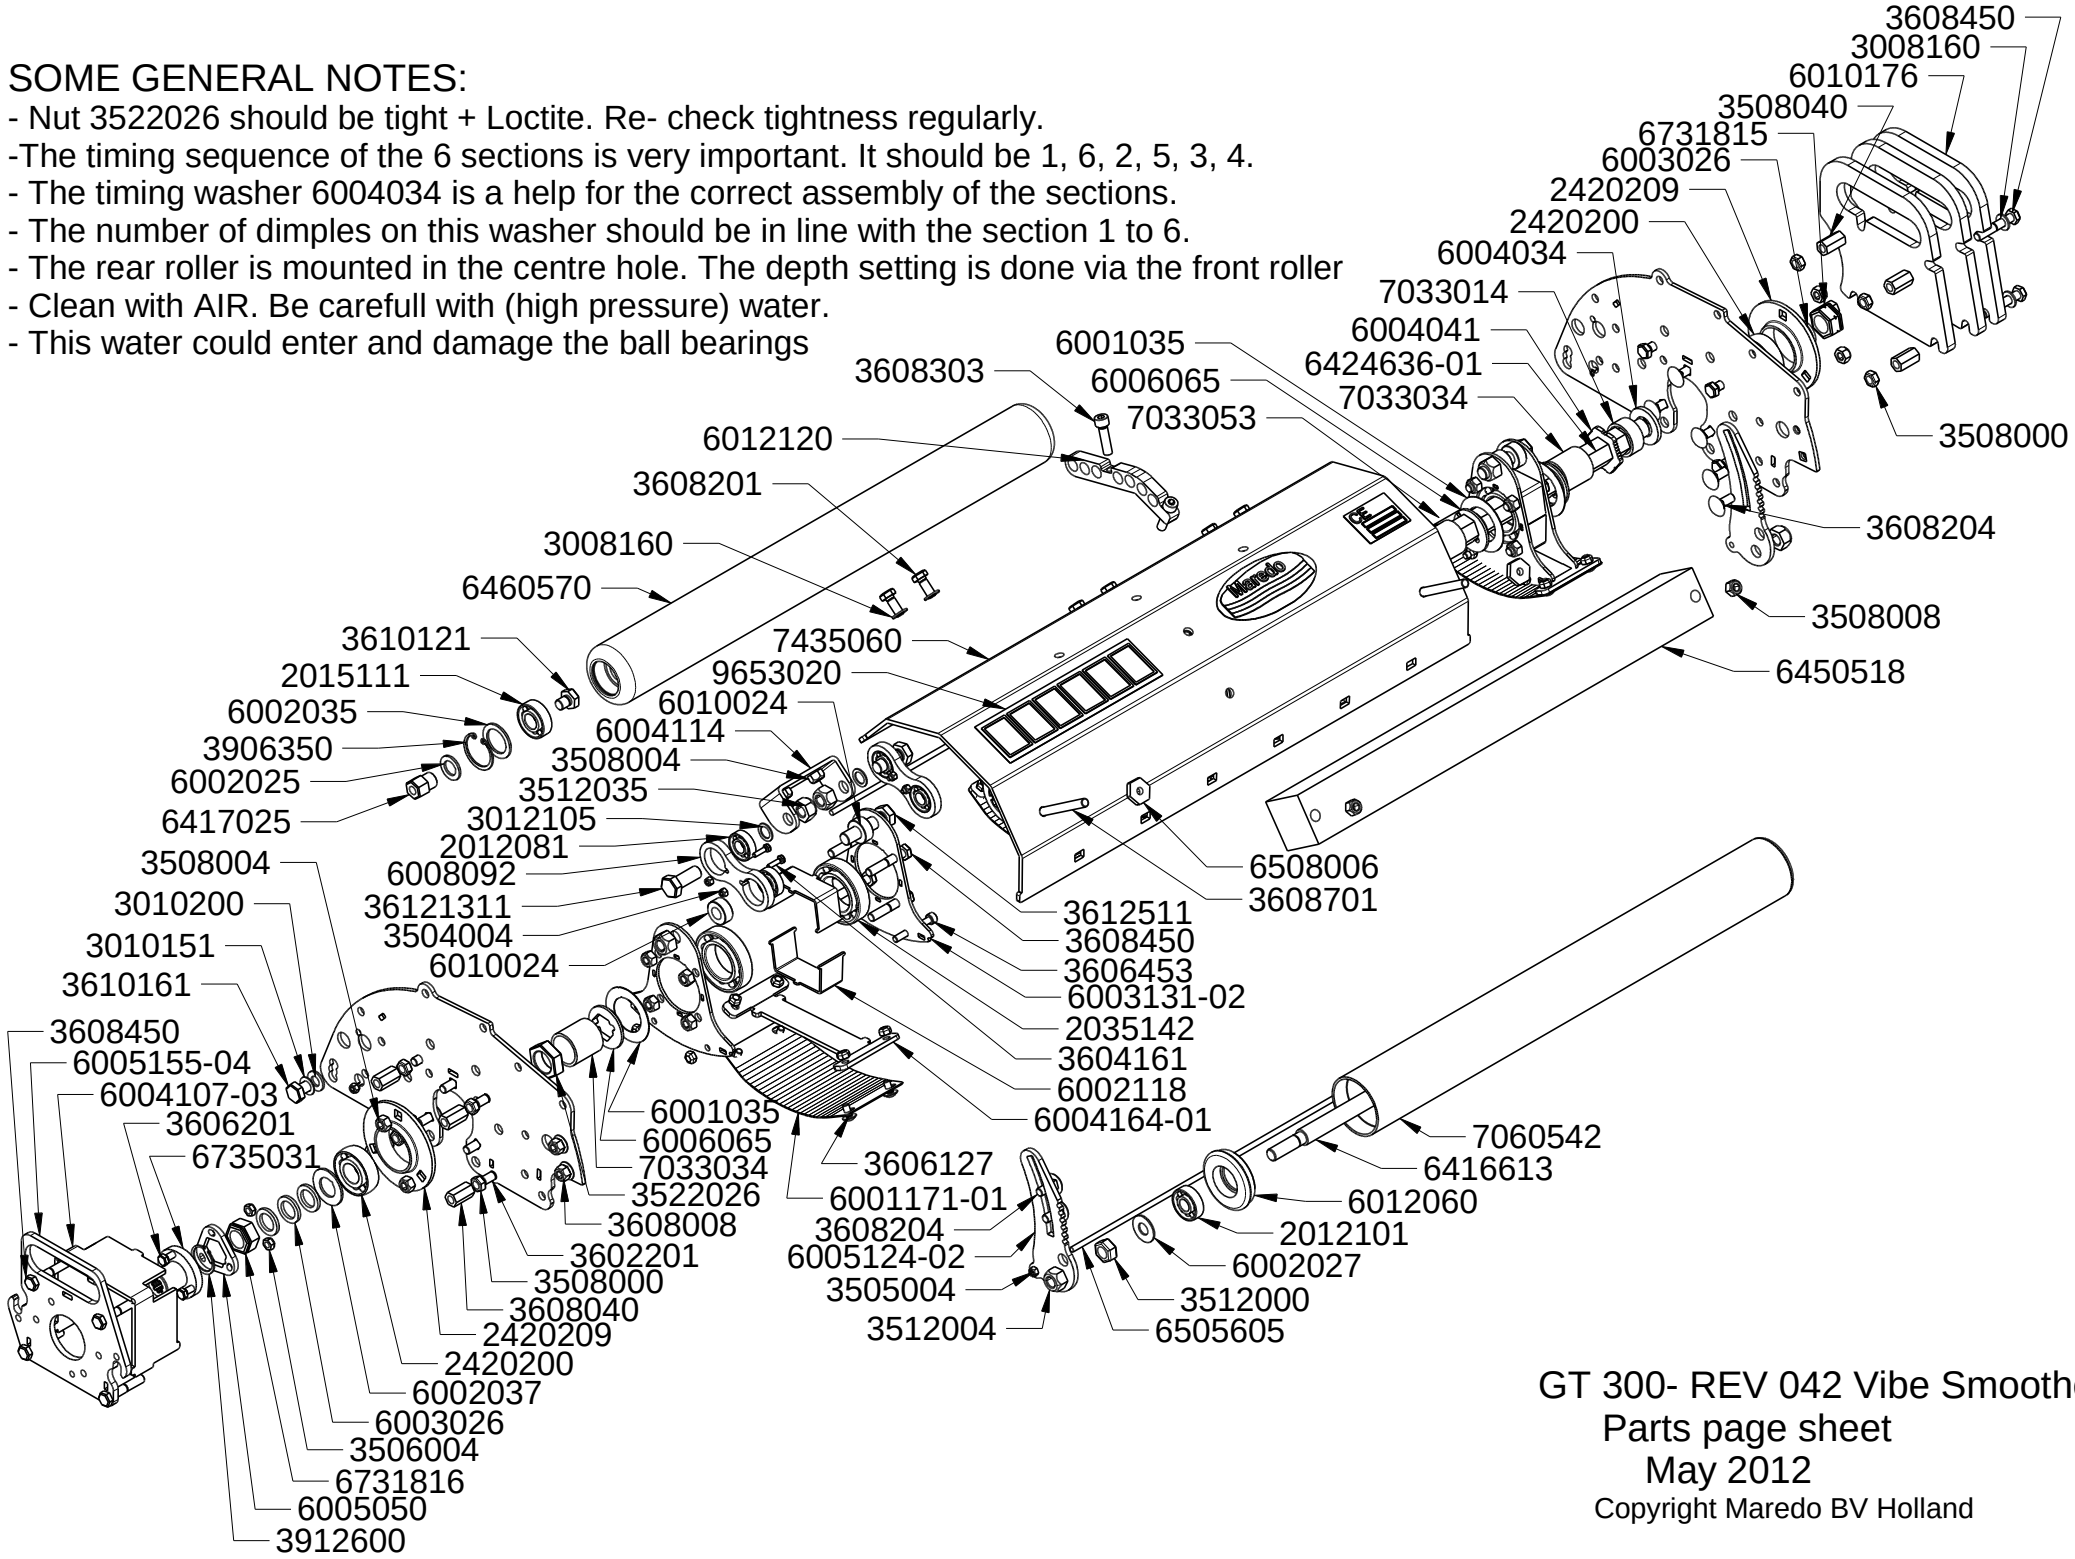


GT 300- REV 042 Vibe Smoother
Parts page sheet
May 2012

Copyright Maredo BV Holland